TECHNICAL DATASHEET

3006/01 Ext 2.0kg CO₂ Chubb

Features

The Chubb 2.0kg Carbon Dioxide extinguisher features:

- Australian Standard certified to AS1841.6
- Mild steel polyester powder coated handle and trigger
- Swivel discharge horn
- Aluminium powder coated cylinder
- · Rated for use on Class B and Class E fires.
- Transport style pull out pin
- Forged brass valve
- Zinc plated steel wall bracket.

Suitable for use on:

- Electrical switchboards
- · Commerical buildings
- Manufacturing plants
- Laboritories


188 ZES


Specifications

Model Number:	3006/01
Type:	Carbon Dioxide
Capacity:	2.0kg (Tol: +0%,-2.5%)
Contents:	Carbon Dioxide
Rating:	2B:E
Test Pressure:	22 MPa
Operating Pressure:	~5.6MPa @21°C
Nominal Mass:	5.19kg
Discharge Time:	8 – 10 s
Diffuser Orifice:	2 x 2.4mm
Service Temperature:	-5°C to 50°C

NOTE:

Nominal mass and discharge times listed are approximate. Slight variations may occur.

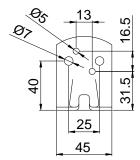

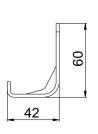

Chubb Fire & Security Pty Ltd ABN 47 000 067 541 13 15 98 www.chubb.com.au





Service Requirements

Service in accordance with Australian Standard AS1851.


Additional AS1851 Service Requirements:

- Replace Carbon Dioxide every five (5) years
- The recommended location for stamping the cylinder pressure test date is on the neck of the cylinder, consisting of figures not less than 3mm in height and shall as a minimum be of the form MM/YY, or MM/YYYY.

Recharge Instructions

CAUTION:- Ensure extinguisher is fully depressurised prior to removal of the operating head.

- 1. Discharge extinguisher and expel all remaining pressure.
- 2. When all pressure is expelled, fully unscrew the operating head and remove from the cylinder.
- 3. Unscrew syphon tube and remove spring and valve stem assembly.
- 4. Thoroughly clean the head and all associated components.
- Replace Neck 'O' ring seal.
- 6. Inspect all other 'O' Rings and seals, replace as required.
- 7. Lubricate the Neck 'O' ring and the top 'O' ring on Valve Stem Assembly with Molykote 55M or Molykote 111.
- 8. Check Horn Assembly and ensure it is unblocked and free from damage.
- Inspect cylinder as per AS1851 and AS2030.5 requirements. Check cylinder date stamp and pressure test cylinder (as per AS2337.1) if 5 years and older. Ensure cylinder interior is clean and free of corrosion and foreign objects. Check and clean the cylinder neck thread.
- 10. Refit the operating head assembly and hand tighten.
- 11. Recharge the extinguisher with Carbon Dioxide gas to the correct mass as specified on the extinguisher label (filling tolerance: +0% -2.5%).
- 12. Replace safety pin and fit anti-tamper seal. Make sure you do not accidentally discharge the contents.
- 13. Leak test all joints and seals disturbed during the service with a leak detector or submerge in a warm water bath or with the use of a leak detection solution such as "Snoop".
- 14. Ensure all maintenance records and documentation is completed

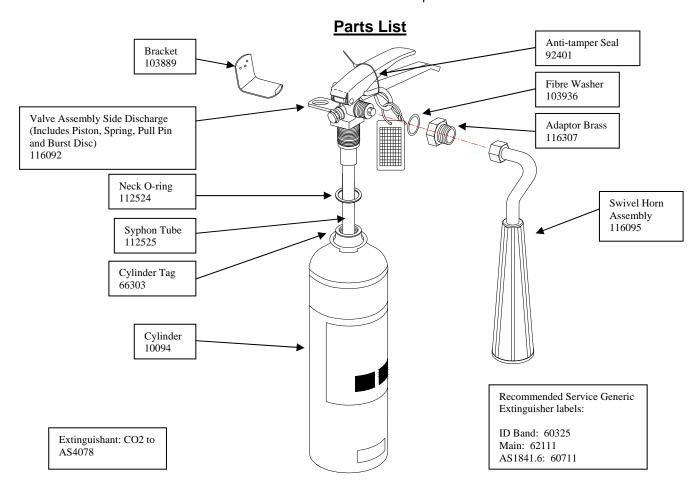

Note: Not all parts shown may be available stocked items.

Copyright © 2013 Chubb Fire & Security Pty Ltd. All rights reserved. 1/11/2013